

KiCad

The KiCad Team

REVISION HISTORY

NUMBER	DATE	DESCRIPTION	NAME

Contents

1	&#x7b80;&#x4eb;	1
1.1	系统要求	1
1.2	KiCad 文件和文件夹	1
2	&#x5b89;&#x88c5;&#x548c;&#x5347;&#x7ea7; KiCad	4
2.1	导入设置	4
2.2	从早期版本迁移文件	5
3	&#x4f7f;&#x7528; KiCad &#x5de5;&#x7a0b;&#x7ba1;&#x7406;&#x5668;	6
3.1	工程管理器窗口	7
3.2	工程树视图	7
3.3	侧面工具条	8
3.4	创建一个新工程	8
3.5	从其他 EDA 工具导入工程	9
4	KiCad &#x914d;&#x7f6e;	10
4.1	共同偏好设置	11
4.2	鼠标和触摸板偏好设置	13
4.3	快捷键偏好设置	14
4.4	路径配置	15
4.4.1	Advanced environment variables	16
4.5	库配置	16
5	&#x5de5;&#x7a0b;&#x6a21;&#x677f;	17
5.1	使用模板	17
5.2	模板位置：	18
5.3	创建模板	18
5.3.1	模板示例	20
5.3.2	所需文件：	20
5.3.3	可选文件：	21
6	&#x63d2;&#x4ef6;&#x548c;&#x5185;&#x5bb9;&#x7ba1;&#x7406;&#x5668;	22
7	Actions reference	23
7.1	KiCad Project Manager	23

参考手册

Copyright

本文件的版权 © 2010-2021 由下列贡献者通用公共许可证（http://www.gnu.org/licenses/gpl.html）版或更高版本，或知识共享署.0版或更高版本的条款发布它和/本指南中的所有商标均属于其&#x

Contributors

Jean-Pierre Charras, Fabrizio Tappero, Jon Evans.

翻译人员

taotieren <admin@taotieren.com>, 2019, 2020, 2021.

Telegram 简体中文交流群: https://t.me/KiCad_zh_CN

Feedback

KiCad 项目欢迎与本软件或其文档相关于如何提交反馈意见或报告项的说明
<https://www.kicad.org/help/report-an-issue/>

Chapter 1

简介

KiCad 是一款用于创建电子电路原理
 KiCad 支持综合设计工作流程，其中
 PCB 一起设计，也支持特殊用途的
 KiCad 还包括一些帮助电路和 PCB 设计&#x
 PCB 计算器、用于检查制造文件的
 Gerber 浏览器和用于检查电路行为ݨ
 SPICE 模拟器。

KiCad 可在所有主要的操作系统和广
 它支持多达 32 个铜层的 PCB，适合R
 KiCad 是由世界各地的软件和电气工
 该文件的最新版本可在 <https://docs.kicad.org> 。

1.1 系统要求

KiCad 能够在多种硬件和操作系统上&#x
 1920x1080 或更高分辨率的专用显卡和&#x
 有关最新的系统要求，请查看
 KiCad 网站：<https://kicad.org/help/system-requirements/>

1.2 KiCad 文件和文件夹

KiCad 创建并使用具有以下特定文件

Project manager file:

*.kicad_pro	工程文件，包含原理图T PCB 之间共享的设置
*.pro	旧版 (KiCad 5.x 和更早版本) 工程文件。 可以读取，并将由工程{ .kicad_pro 文件。

Schematic editor files:

*.kicad_sch	包含所有信息和元件本
*.kicad_sym	原理图符号库文件，包T
*.sch	旧版 (KiCad 5.x 和更早版本) 原理图文件。 可以ࢿ取，并将在写入e .kicad_sch 文件。
*.lib	旧版 (KiCad 5.x 和更早版本) 原理图库文件。可以ࢿS
*.dcm	旧版 (KiCad 5.x 和更早版本) 原理图库文档。可以ࢿS
*_cache.lib	旧版 (KiCad 5.x 和更早版本) 原理图元件库缓存文件0 正确加载旧版原理图 (.sch) 文件所需。
sym-lib-table	符号库列表 (符号库表)： 原理图编辑器中可用的{

Board editor files and folders:

*.kicad_pcb	包含除板框以外的所有封装库文件夹。
*.pretty	封装库文件夹。 文件夹本身就是库。
*.kicad_mod	封装文件，每个文件包含设计规则文件，包含某个文件的自定义设计规则。
*.kicad_dru	设计规则文件，包含某个文件的自定义设计规则。
*.brd	旧版 (KiCad 4.x 和更早版本) 电路板文件。 当前电路板编辑器可以设计规则。
*.mod	旧版 (KiCad 4.x 和更早版本) 封装库文件。 可由封装或线路板编辑器中可用的封装库文件。
fp-lib-table	封装库列表（ 封装库表 ）： 线路板编辑器中可用的封装库文件。
fp-info-cache	缓存以加速封装库的加设计规则文件的自定义设计规则。

Common files:

*.kicad_wks	图框页面布局 (图形边框和标题栏) 描述文件
*.net	原理图创建的网表文件， 此文件与 .cmp 文件相关联，适用于偏r
*.kicad_prl	当前工程的本地设置，^ KiCad 记住上次使用的设置， 如图层可见性或选择过 可能不需要与工程一起

Other files:

*.cmp	原理图中使用的元件与元它可以由 Pcbnew 创建并由 Eeschema 导入。 其目的是为用户导入从 Pcbnew 到 Eeschema 的更改 谁更改 Pcbnew 内的封装（例如使用 改变封装 命令） 并希望在原理图中导入
-------	---

Other files:

它们由 KiCad 生成用于制作或文档。

*.gbr	Gerber 文件，用于制作。
*.drl	钻孔文件（Excellon 格式），用于制作。
*.pos	位置文件（ASCII 格式），用于自动插入g
*.rpt	报告文件（ASCII 格式），用于文档。
*.ps	绘图文件（Postscript），用于文
*.pdf	绘图文件（PDF 格式），用于文档。
*.svg	绘图文件（SVG 格式），用于文档。
*.dxf	绘图文件（DXF 格式），用于文档。
*.plt	绘图文件（HPGL 格式），用于文档。

Storing and sending KiCad files

KiCad 原理图和电路板文件包含设计 (.kicad_pro) 中，因此，如果要发送完整&#x


某些文件 (如工程本地设置文件 (.kicad_prl) 和 fp-info-cache 文件) 不需要随工程一 Git 之类的版本控制系统来跟踪 Ki-Cad 工程，则可能需要将这些文件&#x

Chapter 2

Getting Started with KiCad

2.1 Installing KiCad

KiCad is a free and open-source electronic design automation (EDA) software package. It is used to create printed circuit boards (PCBs) and is available for Windows, Linux, and macOS. KiCad is a powerful tool for designing and manufacturing PCBs, and it is used by many engineers and hobbyists around the world.

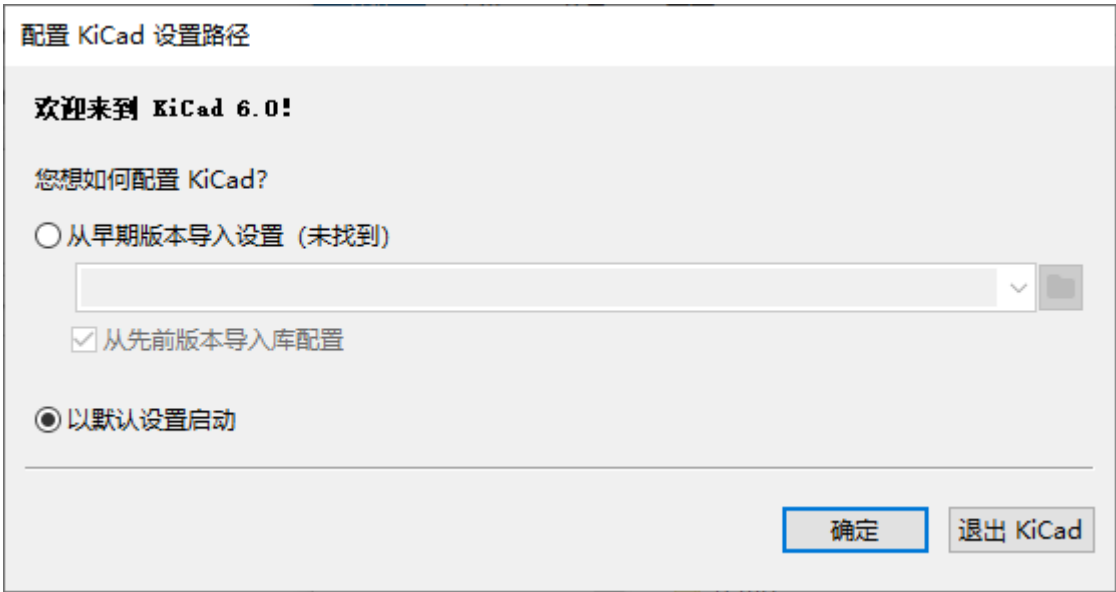

For Windows, the default installation path is %APPDATA%\kicad. For Linux, the default installation path is ~/.config/kicad.

Please note that, the schematic symbol and footprint library tables from the previous version of KiCad will **not** be imported.

For Linux, the default installation path is ~/.config/kicad.

KiCad is a powerful tool for designing and manufacturing PCBs, and it is used by many engineers and hobbyists around the world. KiCad is a free and open-source electronic design automation (EDA) software package. It is used to create printed circuit boards (PCBs) and is available for Windows, Linux, and macOS. KiCad is a powerful tool for designing and manufacturing PCBs, and it is used by many engineers and hobbyists around the world.

Windows	%APPDATA%\kicad
Linux	~/.config/kicad

Chapter 3

4f7f;7528; KiCad 5de5;7a0b;7ba


KiCad 5de5;7a0b;7ba1;7406;5668; (kicad 6216; kicad.exe) 662f;4e00;4e2a;5728;521b
(539f;7406;56fe;548c;7535;8def;677f;7f16;8f91;5668;3001;Gerber 67e5;770
7684;5de5;5177;3002;

4ece; KiCad 7ba1;7406;5668;8fd0;884c;5176;4ed6;5de5;5177;6709;4e00;4e5

- 5728;539f;7406;56fe;7f16;8f91;5668;548c;7535;8def;677f;7f16;8f91;5
- 539f;7406;56fe;7f16;8f91;5668;548c;7535;8def;677f;7f16;8f91;5668;5
(65e0;9700;521b;5efa;7f51;8868;6587;4ef6;)

KiCad 76ee;524d;4e00;6b21;53ea;652f;6301;6253;5f00;4e00;4e2a;5de5;7a0b
KiCad 5de5;7a0b;7ba1;7406;5668;8fd0;884c;539f;7406;56fe;548c;7535;8def
72ec;7acb; 6a21;5f0f;4e0b;8fd0;884c;65f6;ffc;60a8;53ef;4ee5;6253;5f0


3.1 工程文件

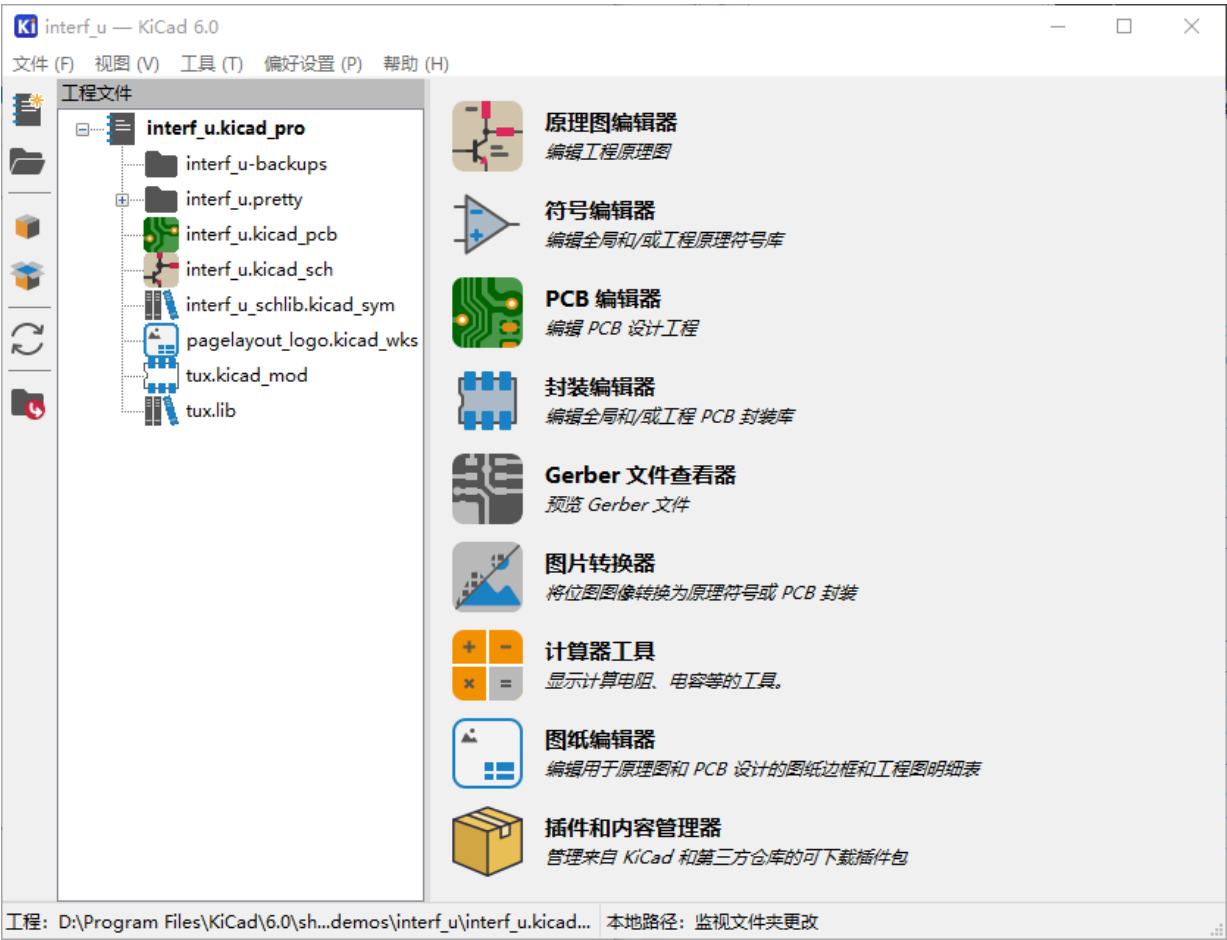

KiCad 工程文件

3.2 工程文件

工程文件

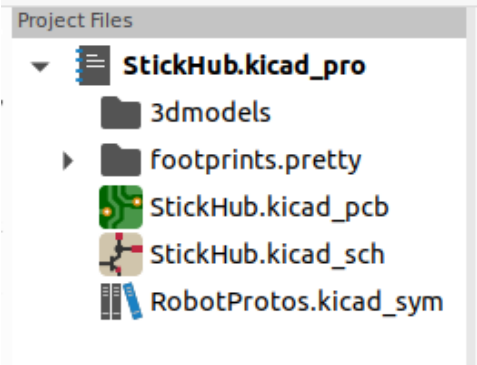

Note

只有 KiCad 知道如何打开的文件才会

3.3

窗口左侧的工具栏为常见的工

	创建一个新的工程。
	打开一个现有的工程。
	创建整个工程的压缩文件。这包括原理图文件、库、PCB等。
	将工程压缩文件解压到一个目标目录中的文件将被覆的刷新树状视图，以检测文件在文件资源管理器中打开]
	
	

3.4 **创建一个新工程**

大多数 KiCad 设计都是从创建工程开
KiCad 工程管理器创建工程有两种ٛ
《工程 - 模板，工程模板》一节&#x
若要创建新工程，请使用 **文件**
菜单中的 **新建工程**... 命令，或单
新建工程 按钮，或使用键盘快&#x
(默认为 C t r l + N)。

```
&#x7cfb;&#x7edf;&#x5c06;&#x63d0;&#x793a;&#x60a8;&#x8f93;&#x5165;&#x5de5;&#x7a0b;&#x540d;&#x79f0;&#x3002;&#x9  
MyProject&#xff0c;KiCad &#x4f1a;&#x5728;&#x5176;&#x4e2d;&#x521b;&#x5efa; MyProject &#x76ee;&#x5f55;&#x548c;&  
MyProject/MyProject.kicad_pro&#x3002;
```

如果您已经有一个存储工程文
新建工程对话框中取消选中 为&#x
复选框。

Note

强烈建议您将每个 KiCad 工程保存在

选择工程名称后，KiCad 将在工程目

example.kicad_pro	KiCad 工程文件。
example.kicad_sch	主原理图文件。
example.kicad_pcb	印刷电路板文件。

3.5 从其他 EDA 工具导入工&#x

KiCad 可以导入由其他一些软件包创

*.sch, *.brd	Eagle 6.x 或更高版本 (XML 格式)
*.csa, *.cpa	CADSTAR 档案格式


要从这些工具中导入工程，请W
文件 菜单的 导入非 KiCad 工程 子菜&#x
系统将提示您在导入文件浏览V
(例如，project.sch 和 project.brd)。一旦选择了请&#x
KiCad 工程。

Chapter 4

KiCad 配置

KiCad 偏好设置始终可以从 偏好设置菜单访问，也可以使用快捷键 (৬trl+,)访问。 偏好设置对话框在运KiCad 工具之间共享。有些偏好设置 (如原理图或电路板编辑器)。

4.1 抗锯齿;硬件加速图形;软件加速图形;

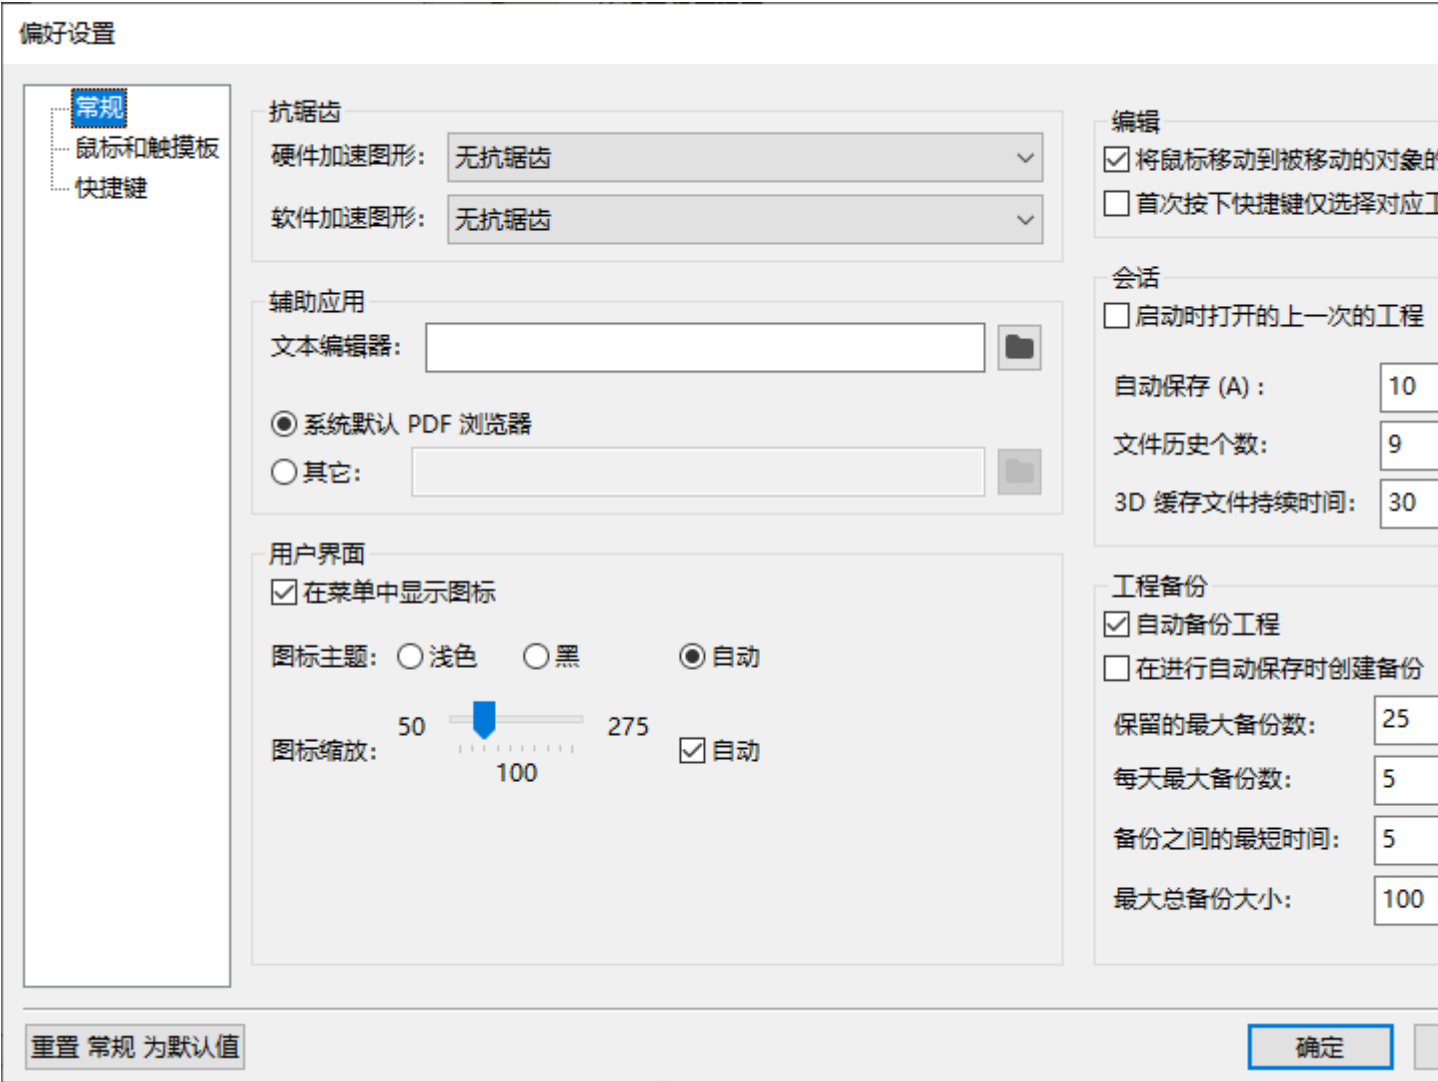

Accelerated graphics antialiasing: KiCad can use different methods to prevent aliasing (jagged lines) when rendering using a graphics card. Different methods may look better on different hardware, so you may want to experiment to find the one that looks best to you.

Fallback graphics antialiasing: KiCad can also apply antialiasing when using the fallback graphics mode. Enabling this feature may result in poor performance on some hardware.

Text editor: Choose a text editor to use when opening text files from the project tree view.

PDF viewer: Choose a program to use when opening PDF files.

Show icons in menus: Enables icons in drop-down menus throughout the KiCad user interface.

Note

抗锯齿;硬件加速图形;软件加速图形;

Icon theme: Sets whether to use the icon theme designed for light window backgrounds or dark window backgrounds. The default setting of Automatic will choose the theme based on the lightness of the operating system window theme.

Icon scale: Sets the size of the icons used in menus and buttons throughout KiCad. Choose *Automatic* to pick an appropriate icon scale automatically based on your operating system settings.

Canvas scale: Sets the scale of the drawing canvas used in the KiCad editors. Choose *Automatic* to pick an appropriate canvas scale automatically based on your operating system settings.

Apply icon scaling to fonts: This setting will scale fonts used in the UI according to the icon scale setting. This is not needed for most users, but may improve the look of KiCad on certain Linux platforms when using a high-DPI display.

Warp mouse to origin of moved object: When enabled, the mouse cursor will be repositioned (warped) to the origin of an object when you start a move command on that object.

First hotkey selects tool: When disabled, pressing the hotkey for a command such as *Add Wire* will immediately start the command at the current cursor location. When enabled, pressing the hotkey the first time will just select the *Add Wire* tool but will not immediately begin a wire.

Remember open files for next project launch: When enabled, KiCad will automatically re-open any files that were previously open when a project is re-opened.

Auto save: When editing schematics and board files, KiCad can automatically save your work periodically. Set to 0 to disable this feature.

File history size: Configure the number of entries in the list of recently-opened files

3D cache file duration: KiCad creates a cache of 3D models in order to speed up the 3D viewer. You can configure how long to keep this cache before deleting old files.

Automatically backup projects: When enabled, KiCad projects will be archived to ZIP files automatically according to the settings below. The archives will be stored in a subfolder of the project folder. Backups are created when saving files in the project.

Create backups when auto save occurs: When enabled, a backup will be created every time an automatic file save occurs (if the backup is permitted by the settings below). This setting has no effect if the auto save interval is set to 0 (disabled).

Maximum backups to keep: When creating a new backup, the oldest backup file will be deleted to keep the total number of backup files below this limit.


Maximum backups per day: When creating a new backup, the oldest backup file created on the current day will be deleted to stay below this limit.

Minimum time between backups: If backup is triggered (for example, by saving a board file), the backup will not be created if an existing backup file is newer than this limit.

Maximum total backup size: When creating a new backup file, the oldest backup files will be deleted to keep the total size of the backup files directory below this limit.

Remember open files for next project launch: When checked, KiCad will re-open the schematic and board editor if they were open the last time you closed the project manager.

4.2 鼠标和触摸板

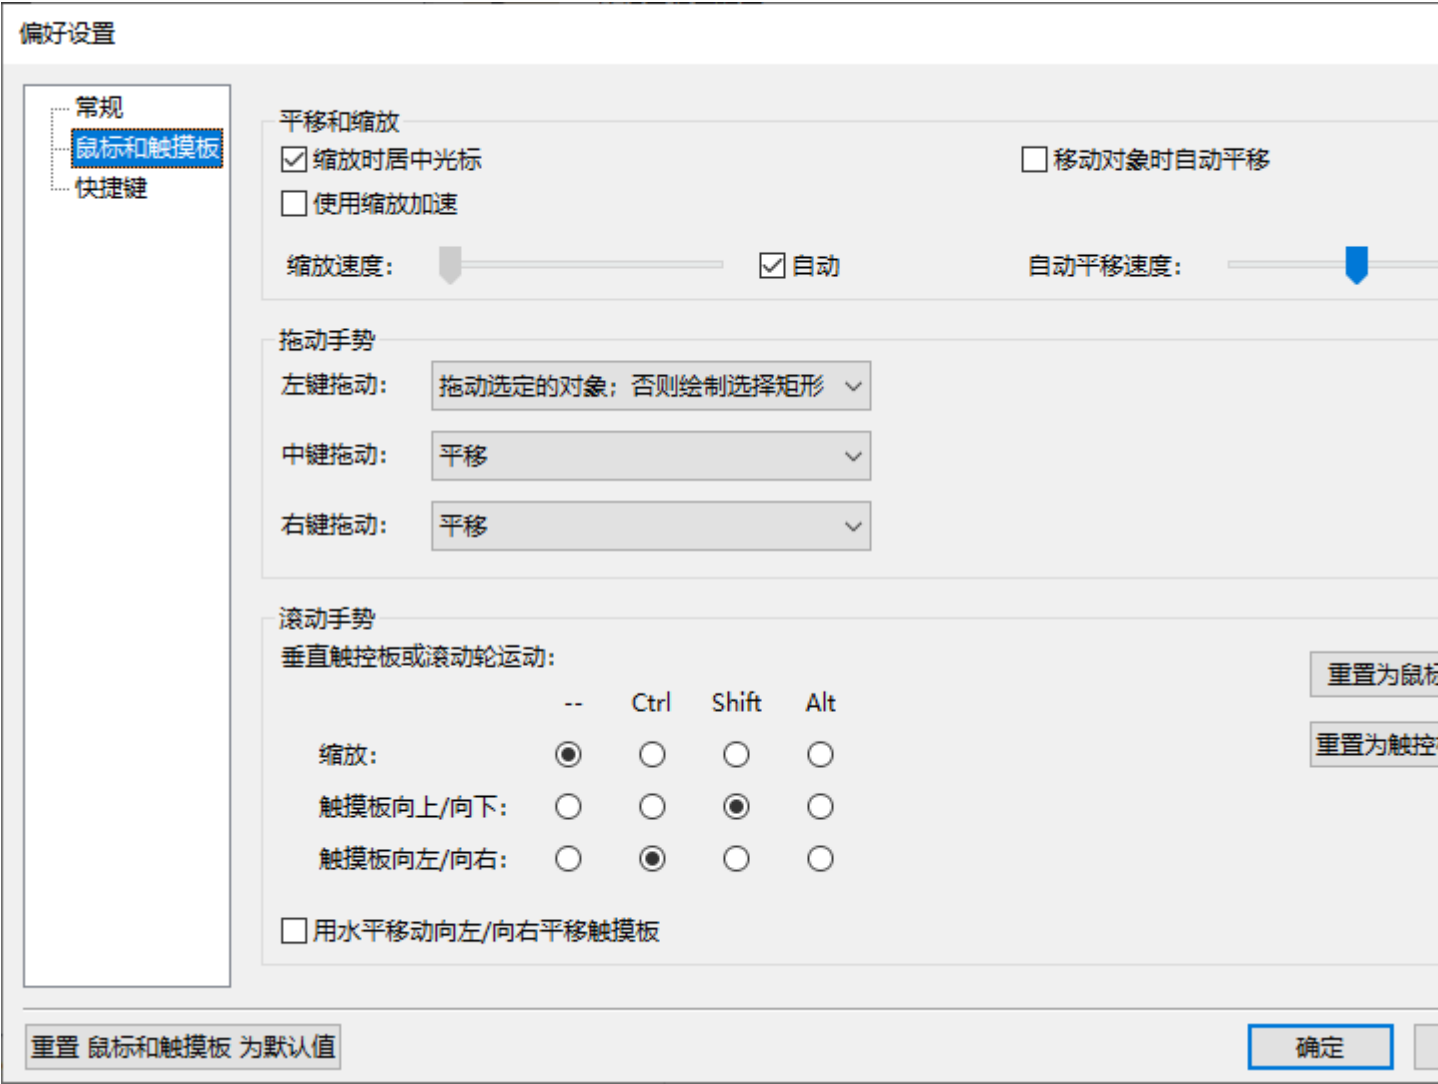

Center and warp cursor on zoom: When enabled, zooming using the hotkeys or mouse wheel will cause the view to be centered on the cursor location.

Use zoom acceleration: When enabled, scrolling the mouse wheel or touchpad faster will cause the zoom to change faster.

Zoom speed: Controls how much the zoom changes for a given amount of scrolling the mouse wheel or touchpad. Use *Automatic* to set a default value depending on your operating system.

Automatically pan while moving object: When enabled, the view can be panned while moving an object by moving close to the edge of the canvas.

Auto pan speed: Controls how fast the canvas pans while moving an object.

Mouse buttons: You can set the behavior of dragging the middle and right mouse buttons to zoom the view, pan the view, or have no effect. You can also set the behavior of dragging the left mouse button depending on whether or not any objects are already selected in the editing canvas.

Note

鼠标和触摸板

快捷键偏好设置存储在 KiCad 设置目.hotkeys 文件中 (有关设置目录在操作《设置，设置》一节)。如果您偏快捷键，则可以通过导入适当目.hotkeys 文件将该配置传输到另一台目

4.4 路径配置

在 KiCad 中，可以使用 *environment* 变量 定义设一些环境变量由 KiCad 在内部定义，形状等的路径。

当绝对路径未知或可能发生变可请考虑以下可能安装在不同位目


- 原理图符号库
- 封装库
- 封装定义中使用的 3D 形状文件

For instance, the path to the `connect.pretty` footprint library, when using the `KICAD6_FOOTPRINT_DIR` environment variable, would be defined as `${KICAD6_FOOTPRINT_DIR}/connect.pretty`.

在 偏好设置 → 配置路径... 菜单中， KiCad 环境变量定义路径，如果需要

KiCad environment variables:

KICAD6_3DMODEL_DIR	Base path of 3D models used in footprints.
KICAD6_3RD_PARTY	Location for plugins, libraries, and color themes installed by the Plugin and Content Manager .
KICAD6_FOOTPRINT_DIR	Base path of footprint library files.
KICAD6_SYMBOL_DIR	Base path of symbol library files.
KICAD6_TEMPLATE_DIR	Location of project templates installed with KiCad.
KICAD_USER_TEMPLATE_DIR	Location of personal project templates.

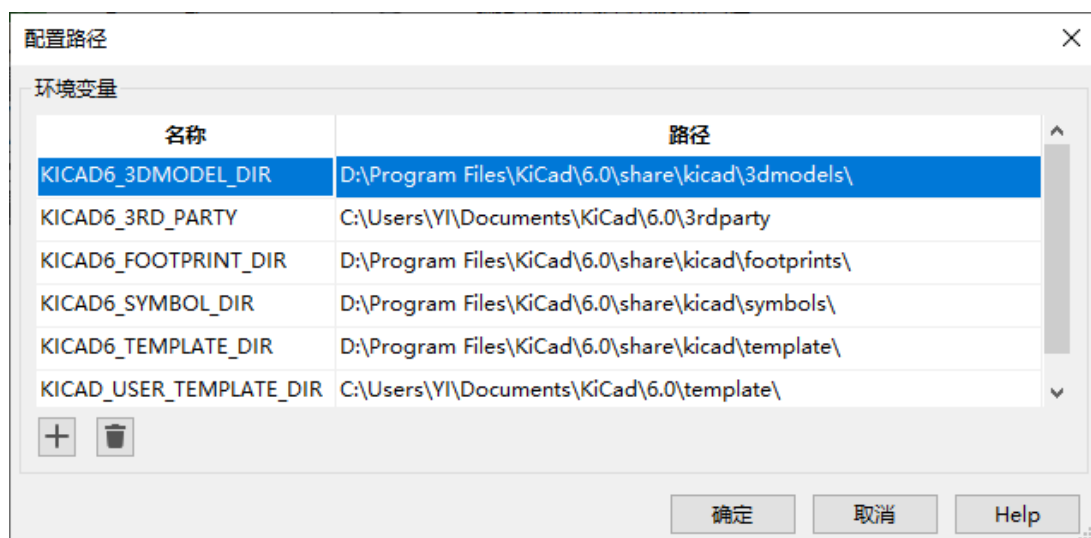

Paths set in the Configure Paths dialog are internal to KiCad and are not visible as environment variables outside of KiCad. They are stored in [KiCad's user configuration files](#).

Paths can also be set as environment variables outside of KiCad, which will override any settings in the user's configuration.

Note

You cannot override an environment variable that has been set outside of KiCad by using the Configure Paths dialog. Any variable that has been set externally will be shown as read-only in the dialog.

Note also that the environment variable `KIPRJMOD` is **always** internally defined by KiCad, and expands to the **current project absolute path**.

For instance, `${KIPRJMOD}/connect.pretty` is always the `connect.pretty` folder (the footprint library) inside **the current project folder**.

The `KIPRJMOD` variable cannot be changed in the Configure Paths dialog or overridden by an external environment variable.

4.4.1 Advanced environment variables

Some advanced environment variables can be set to customize KiCad’s behavior. These variables are not shown in the environment variable configuration and cannot be used in path substitutions. They cannot be modified in the Configure Paths dialog, but they can be overridden by system environment variables.

Changing these variables will not result in KiCad moving any files from the default location to the new location, so if you change these variables you will need to copy any desired settings or files manually.

Additional environment variables:

KICAD_CONFIG_HOME	Base path of KiCad configuration files. Subdirectories will be created within this directory for each KiCad minor version.
KICAD_DOCUMENTS_HOME	Base path of KiCad user-modifiable documents, such as projects, templates, Python scripts, libraries, etc. Subdirectories will be created within this directory for each KiCad minor version. This directory is provided as a suggested user data location, but does not need to be used.



Warning

If you modify the configuration of paths, please quit and restart KiCad to avoid any issues in path handling.

4.5 库配置

The **Preferences → Manage Symbol Libraries...** menu lets you manage the list of symbol libraries (**symbol library table**).

Likewise, use the **Preferences → Manage Footprint Libraries...** menu to manage the list of footprint libraries (**footprint library table**).

For each type of library (symbol and footprint), there are 2 library tables: global and project specific. The global library table is located in the [user configuration directory](#) and contains a list of libraries available to all projects. The project-specific library table is optional and contains a list of libraries specific to the project. It is located in the project directory.


Chapter 5

5. 工程模板


工程模板是KiCad PCB编辑器中用于创建新工程的基础模板。它定义了工程的基本结构、文件组织、以及默认的工程设置。工程模板通常包含一个主工程文件（.pro）、一个工程目录（.pro_dir）、以及一个工程模板文件（.pro_tmpl）。工程模板还可以包含一些默认的工程设置，如工程名称、工程路径、工程描述等。

5.1 工程模板

工程模板的创建和修改可以通过KiCad PCB编辑器的“工程模板”对话框来完成。该对话框提供了对工程模板的浏览、选择、创建和修改的功能。

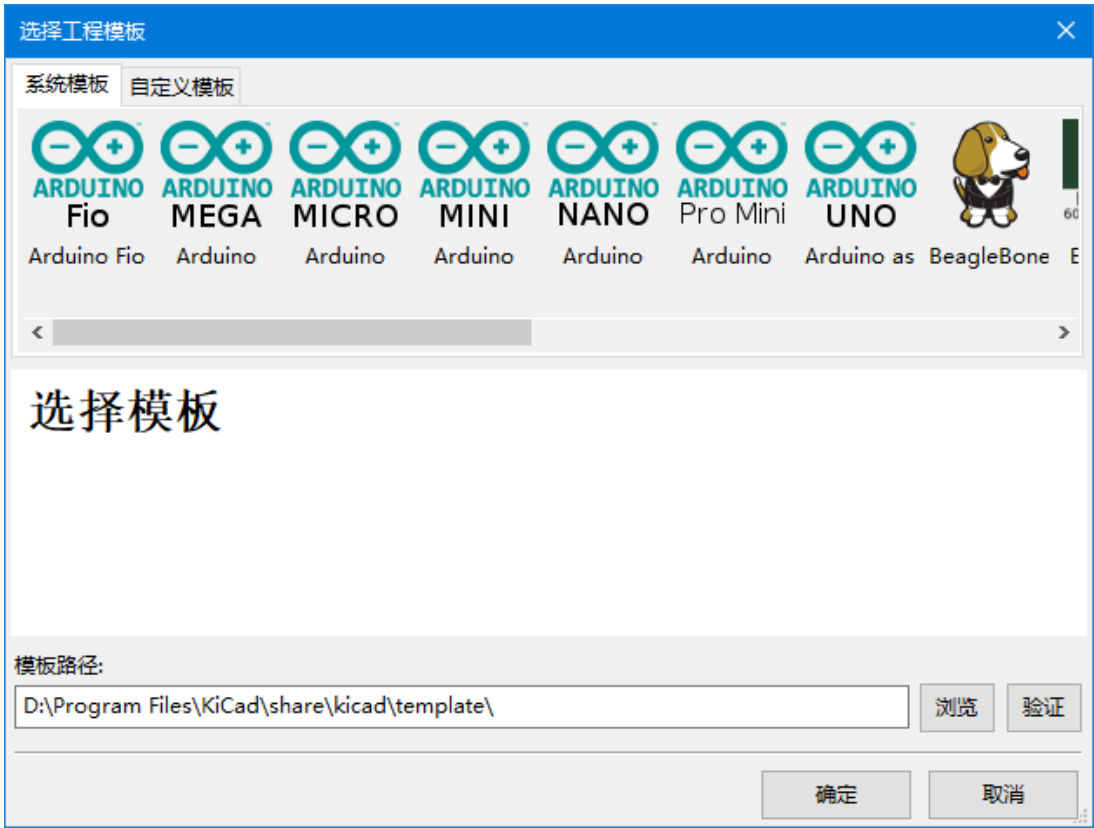

工程模板的创建和修改可以通过KiCad PCB编辑器的“工程模板”对话框来完成。该对话框提供了对工程模板的浏览、选择、创建和修改的功能。工程模板的创建和修改可以通过KiCad PCB编辑器的“工程模板”对话框来完成。该对话框提供了对工程模板的浏览、选择、创建和修改的功能。

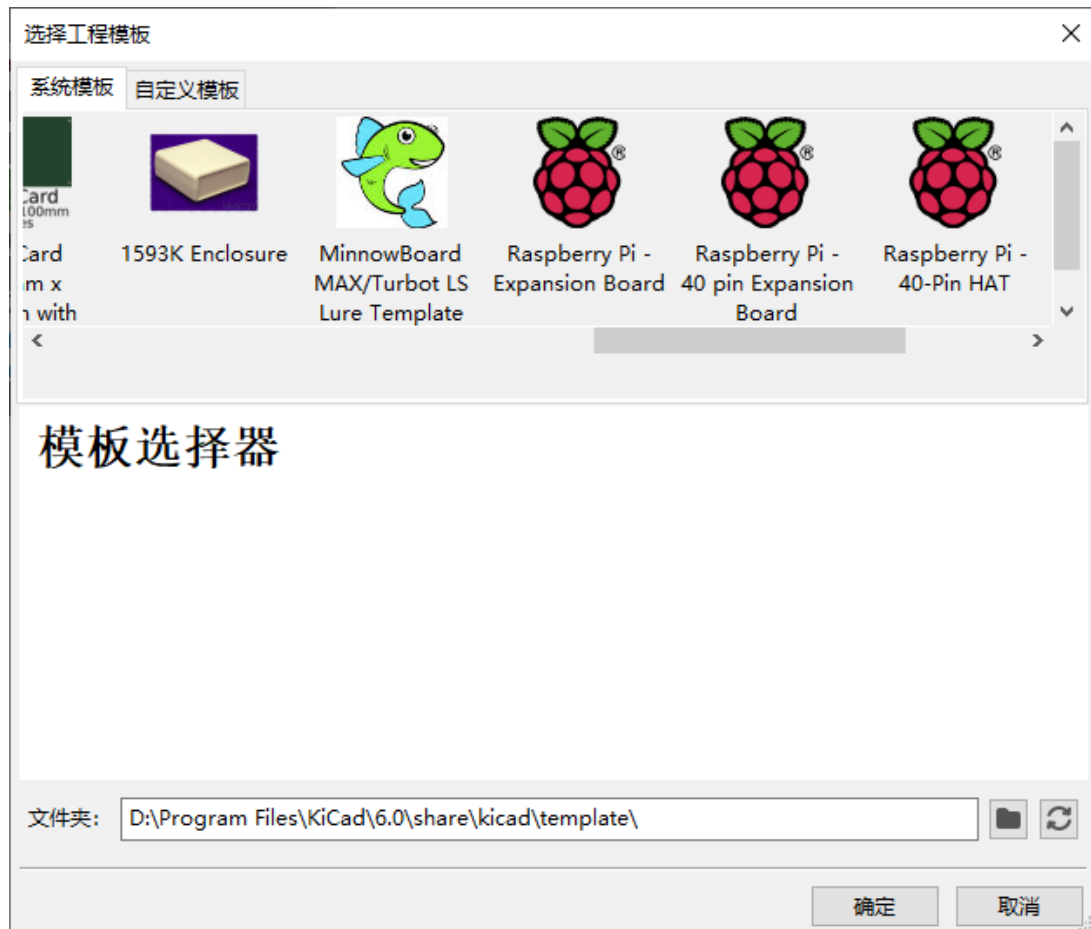

5.2 \mathbb{R}^n and \mathbb{C}^n

KiCad 在以下路径中查找模板文件：

- `环境变量 KICAD_USER_TEMPLATE_DIR 中定义的路径`
- `环境变量 KICAD_TEMPLATE_DIR 中定义的路径`
- `系统模板：<kicad bin dir>../share/kicad/template/`
- `用户模板：`
 - Unix: `~/kicad/template/`
 - Windows: `C:\Documents and Settings\username\My Documents\kicad\template` or `C:\Users\username\Documents\kicad\template`
 - Mac: `~/Documents/kicad/template/`

5.3 $\times 521b; \times 5efa; \times 6a21; \times 677f;$

模板名称是存储模板文件的目元数据目录是名为 **meta** 的子目录，元数据由一个必需文件组成，元所有文件必须由用户使用文本的 KJ Cad 工程文件创建，并放入所需的

使用模板创建工程时，模板中的除外。包含模板名称的文件和例如，从名为 **示例** 的模板创建工新工程 的工程：

模板 &#x793a;&#x4f8b; 目录中的文件名称的文	在工程 &#x65b0;&#x5de5;&#x7a0b; 目录中创建的文
示例.kicad_pro 示例.kicad_sch 示例.kicad_pcb 示例- 第一次.kicad_sch 第二次- 示例.kicad_sch 第三次.kicad_sch 第三次.kicad_pcb	&#x65b0;&#x5de5;&#x7a0b;.kicad_pro &#x65b0;&#x5de5;&#x7a0b;.kicad_sch &#x65b0;&#x5de5;&#x7a0b;.kicad_pcb &#x65b0;&#x5de5;&#x7a0b;- &#x7b2c;&#x4e00;&#x6b21;.kicad_sch &#x7b2c;&#x4e8c;&#x6b21;- &#x65b0;&#x5de5;&#x7a0b;.kicad_sch 第三次.kicad_sch 第三次.kicad_pcb

模板不需要包含完整的工程，将使用其默认的创建工程行为外。包含模板名称重命名规则的例外。包含模板名称进行重

模板 &#x793a;&#x4f8b; 目录中的文件名称的文	在 &#x65b0;&#x5de5;&#x7a0b; &#x65b0;&#x5de5;&#x7a0b; 目录中创建的文
示例.kicad_sch 第一次- 示例.kicad_sch 第一次- 示例.kicad_pcb 第二次- 示例.kicad_sch 第二次- 示例.kicad_pcb	&#x65b0;&#x5de5;&#x7a0b;.kicad_sch &#x7b2c;&#x4e00;&#x6b21;- &#x65b0;&#x5de5;&#x7a0b;.kicad_sch &#x7b2c;&#x4e00;&#x6b21;- &#x65b0;&#x5de5;&#x7a0b;.kicad_pcb &#x7b2c;&#x4e8c;&#x6b21;- &#x65b0;&#x5de5;&#x7a0b;.kicad_sch &#x7b2c;&#x4e8c;&#x6b21;- &#x65b0;&#x5de5;&#x7a0b;.kicad_pcb &#x65b0;&#x5de5;&#x7a0b;.kicad_pro (默认) &#x65b0;&#x5de5;&#x7a0b;.kicad_pcb (默认)

作为模板名称重命名规则的例外。包含模板名称进行重


模板 &#x793a;&#x4f8b; 目录中的文件名称的文	在 &#x65b0;&#x5de5;&#x7a0b; &#x65b0;&#x5de5;&#x7a0b; 目录中创建的文
示例.kicad_sch 示例.kicad_pcb &#x7b2c;&#x4e00;&#x6b21;- &#x793a;&#x4f8b;.kicad_pro 第一次- 示例.kicad_sch 第一次- 示例.kicad_pcb 第二次- 示例.kicad_sch 第二次- 示例.kicad_pcb	示例.kicad_sch 示例.kicad_pcb &#x65b0;&#x5de5;&#x7a0b;.kicad_pro &#x65b0;&#x5de5;&#x7a0b;.kicad_sch &#x65b0;&#x5de5;&#x7a0b;.kicad_pcb 第二次- 示例.kicad_sch 第二次- 示例.kicad_pcb

Note


不建议创建包含多个工程文件的&

5.3.1 模板示例

这是一个显示 **raspberrypi-gpio** 模板的工程e

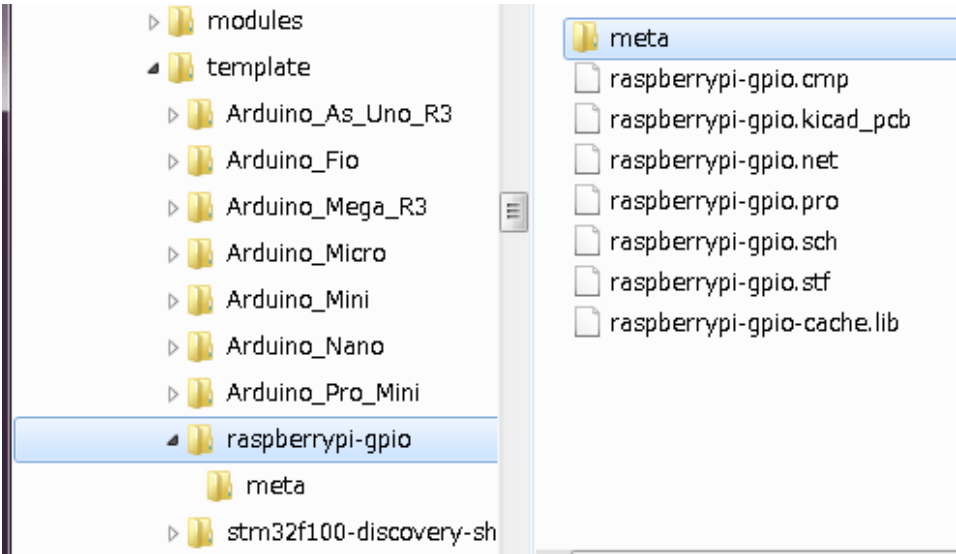

和元数据文件：

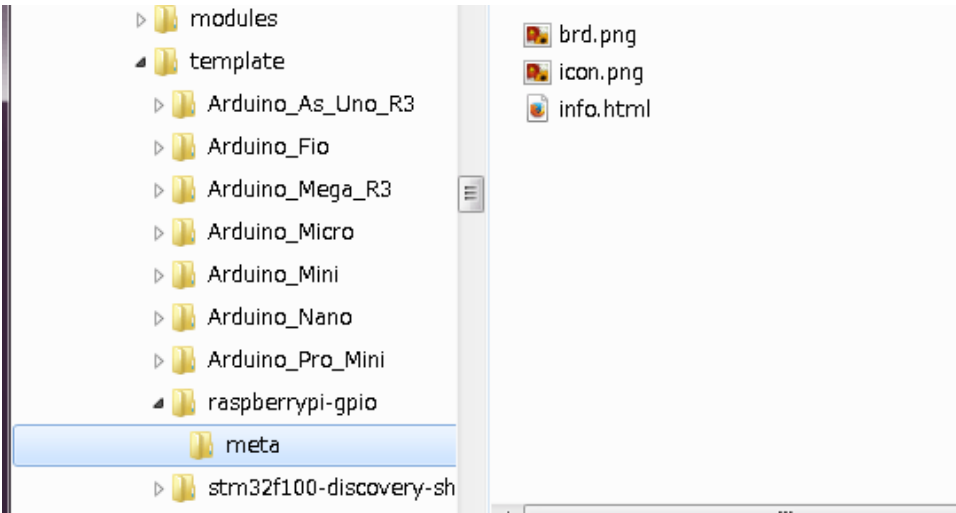

5.3.2 所需文件：

meta/info.html	描述模板的 HTML 格式信息。
----------------	---

<title> 标记确定向用户公开以供选خ
使用 HTML 意味着可以轻松地对图像
本文档中只能使用基本 HTML 标记̀
这是一个示例 **info.html** 文件：

```
<!DOCTYPE HTML PUBLIC "-//W3C//DTD HTML 4.0 Transitional//EN">
<HTML>
<HEAD>
<META HTTP-EQUIV="CONTENT-TYPE" CONTENT="text/html;
charset=windows-1252">
<TITLE>Raspberry Pi - &#x6269;&#x5c55;&#x677f;</TITLE>
</HEAD>
<BODY LANG="fr-FR" DIR="LTR">
<P> ←
&#x8fd9;&#x4e2a;&#x5de5;&#x7a0b;&#x6a21;&#x677f;&#x662f;&#x6269;&#x5c55;&#x677f;&#x7684;&#x57fa;&#x62e9;
<A HREF="http://www.raspberrypi.org/" TARGET="blank">Raspberry Pi $25
ARM &#x677f;&#x3002;</A> <BR><BR> ←
&#x8be5;&#x57fa;&#x7840;&#x5de5;&#x7a0b;&#x5305;&#x62ec;&#x4e00;&#x4e2a;PCB ←
&#x8fb9;&#x7f18;&#xff0c;
&#x5176;&#x5c3a;&#x5bf8;&#x4e0e;Raspberry-Pi PCB&#x76f8;&#x540c;&#xff0c;
&#x8fde;&#x63a5;&#x5668;&#x6b63;&#x786e;&#x653e;&#x7f6e;&#x4ee5;&#x5bf9;&#x9f50;&#x4e24;&#x5757;&#x62e9;
-Pi &#x677f;&#x4e0a;&#x7684;&#x6240;&#x6709; IO &#x90fd;&#x901a;&#x8fc7;
0.1&quot;&#x8fde;&#x63a5;&#x5230;&#x5de5;&#x7a0b;&#x3002;&#x6269;&#x5c55;
&#x5934;&#x3002; <BR><BR>&#x677f;&#x8f6e;&#x5ed3;&#x5982;&#x4e0b;&#x6240;&#x793a;&#xff1a;
</P>
<P><IMG SRC="brd.png" NAME="brd" ALIGN=BOTTOM WIDTH=680 HEIGHT=378
BORDER=0><BR><BR><BR><BR>
</P>
<P>(c) 2012 Brian Sidebotham<BR>(c) 2012 KiCad Developers</P>
</BODY>
</HTML>
```

5.3.3 可选文件：

meta/icon.png	一个 64 x 64 像素的 PNG 图标文件，用作 模板选择对话框中的可像文件（扩展板是扩展板的基本文档中只能使用基本 HTML 标记　这是一个示例 info.html 文件：
---------------	--

meta/info.html 使用的任何其他图像文件（扩展板是扩展板的基本文档中只能使用基本 HTML 标记　这是一个示例 **info.html** 文件：

Chapter 6

插件和内容

Note

TODO: 撰写本节

Chapter 7

Actions reference

Below is a list of every available **action** in the KiCad Project Manager: a command that can be assigned to a hotkey.

7.1 KiCad Project Manager

The actions below are available in the KiCad Project Manager. Hotkeys can be assigned to any of these actions in the **Hotkeys** section of the preferences.

Action	Default Hotkey	Description
New Project. . .	kbd:[Ctrl+N]	Create new blank project
New Project from Template. . .	kbd:[Ctrl+T]	Create new project from template
Open Project. . .	kbd:[Ctrl+O]	Open an existing project
Open Demo Project. . .		Open a demo project
Close Project		Close the current project
Schematic Editor	kbd:[Ctrl+E]	Edit schematic
Symbol Editor	kbd:[Ctrl+L]	Edit schematic symbols
PCB Editor	kbd:[Ctrl+P]	Edit PCB
Footprint Editor	kbd:[Ctrl+F]	Edit PCB footprints
Gerber Viewer	kbd:[Ctrl+G]	Preview Gerber output files
Image Converter	kbd:[Ctrl+B]	Convert bitmap images to schematic or PCB components
Calculator Tools		Run component calculations, track width calculations, etc.
Drawing Sheet Editor	kbd:[Ctrl+Y]	Edit drawing sheet borders and title block
Plugin and Content Manager	kbd:[Ctrl+M]	Manage downloadable packages from KiCad and 3rd party repositories
Open Text Editor		Launch preferred text editor